



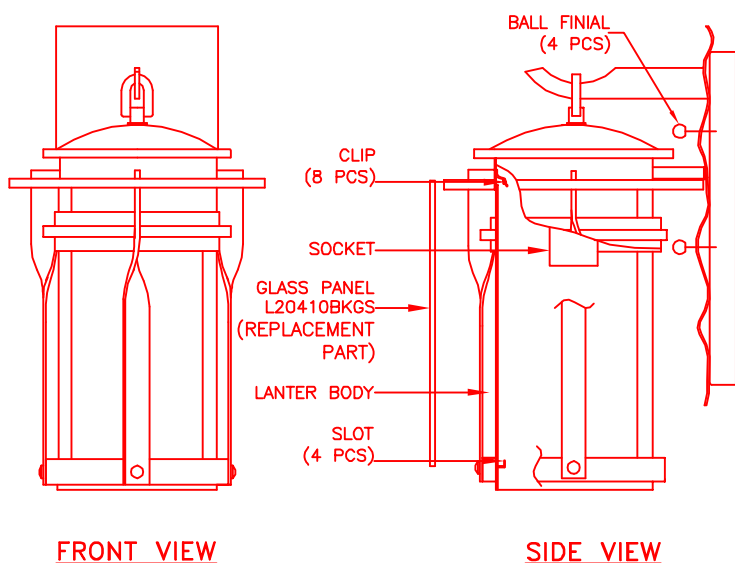

WIRING DETAIL

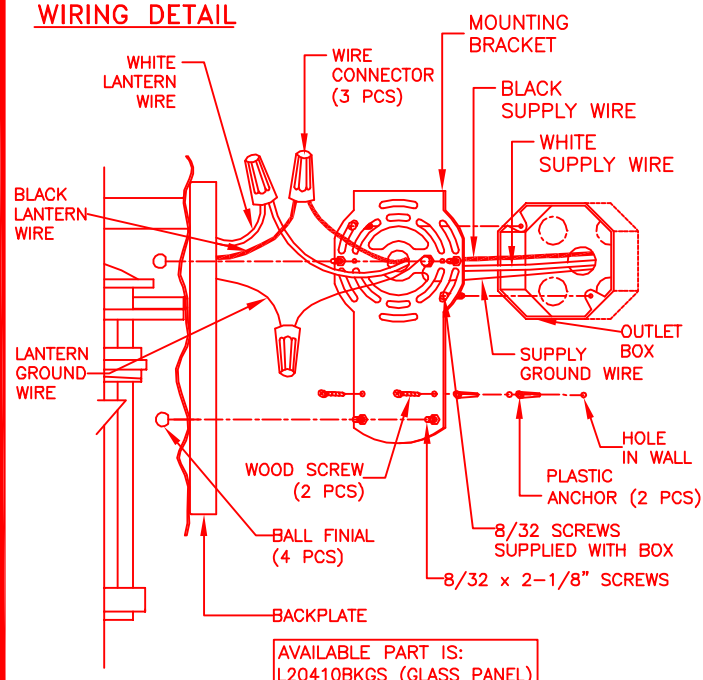

AVAILABLE PART IS:
L20410BKGS (GLASS PANEL)

MODEL: 91903BL

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS LANTERN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

CAUTION: 1. TO AVOID POSSIBLE SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT MAIN PANEL. IF YOU ARE REPLACING AN EXISTING LANTERN, FIRSTLY, TURN THE LANTERN OFF. NEXT, TURN WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN FUSE OR BREAKER TO OFF POSITION. SOME TYPES OF FUSES OR BREAKERS MUST BE UNSCREWED TO SHUT OFF THE POWER.

2. ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES. IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

3. THIS LANTERN IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE LANTERN.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVERS, DRILL, PLIERS AND ADJUSTABLE WRENCH.

UNPACK THE LANTERN

YOU SHOULD HAVE RECEIVED THE FOLLOWING: LANTERN ASSEMBLY AND (4) GLASS PANELS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:

MOUNTING BRACKET, GREEN GROUND SCREW, (3) WIRE CONNECTORS, (2) 8/32 x 1-1/4" SCREWS, (4) 8/32 x 2-1/8" SCREWS, (4) SMALL NUTS, (2) WOOD SCREWS, (2) PLASTIC ANCHORS AND (4) BALL FINIALS.

INSTALLING THE LANTERN

1. SLIDE (4) GLASS PANELS INTO THE SLOTS IN LANTERN BODY AND SECURE WITH CLIPS.

2. ALIGN MOUNTING BRACKET TO OUTLET BOX AND MARK LOCATION OF WALL MOUNTING SCREWS. REMOVE MOUNTING BRACKET FROM WALL AND DRILL HOLES IN WALL FOR MOUNTING PLASTIC ANCHORS. INSERT ANCHORS INTO HOLES. PULL SUPPLY WIRES THROUGH MOUNTING BRACKET. PLACE MOUNTING BRACKET INTO POSITION AND SECURE WITH WOOD SCREWS AND 2 SCREWS FROM OUTLET BOX. (NOTE: IF THE SCREWS WITH OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1 1/4" SCREWS PROVIDED WITH HARDWARE PACKAGE).

3. PLACE LANTERN CLOSE TO OUTLET BOX FOR WIRING. CONNECT THE WHITE OR RIBBED LANTERN WIRE TO THE WHITE SUPPLY WIRE USING A WIRE CONNECTOR. CONNECT THE BLACK OR SMOOTH LANTERN WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE SUPPLY GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE MOUNTING PLATE THEN CONNECT THE SUPPLY GROUND WIRE TO THE LANTERN GROUND WIRE USING THE TWIST-ON WIRE CONNECTOR PROVIDED.

4. CAREFULLY FEED CONNECTED WIRES BACK INTO OUTLET BOX. SPREAD WIRES SO THAT WHITE SPLICES ARE ON ONE SIDE AND BLACK SPLICES ARE ON THE OTHER SIDE. PLACE BACKPLATE ASSEMBLY ON MOUNTING BRACKET AND SECURE WITH (4) BALL FINIALS.

5. INSTALL A 100 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

6. RESTORE POWER, YOUR LANTERN IS NOW READY FOR USE.

